Oral-B

PULSONIC

S 15.523.2

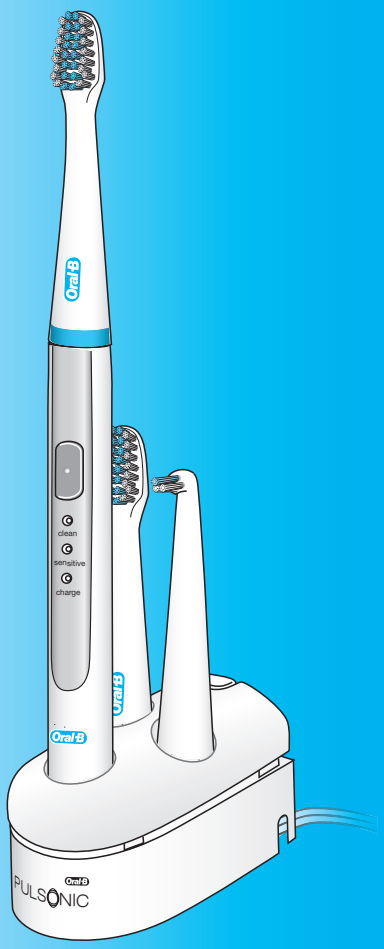

Type 3715
Modèle 3715

powered by BRAUN

Internet :
www.oralb.com
www.braun.com
www.service.braun.com

Braun GmbH
Frankfurter Straße 145
61476 Kronberg
Germany/Allemagne

98579922/V-08

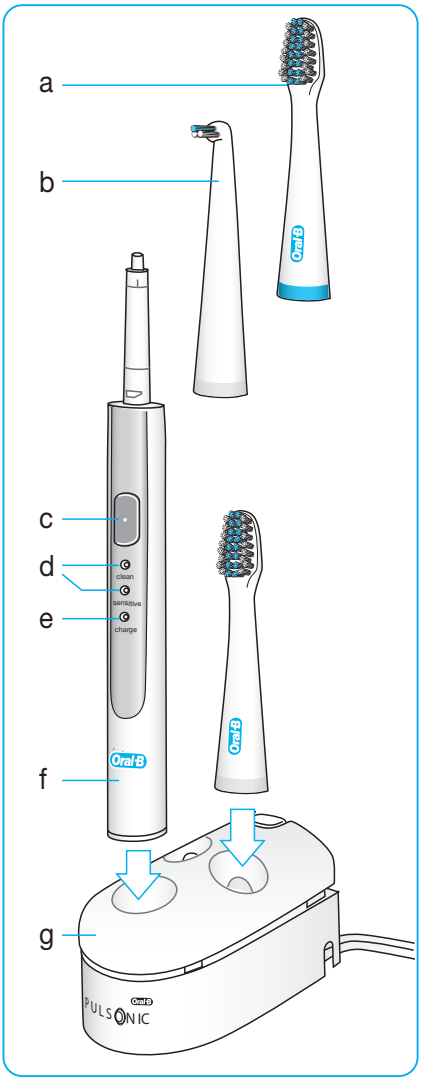
a
b
c
d
clean
sensitive
e
charge
f
g
Oral-B
PULSONIC

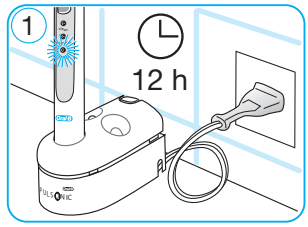
1
12 h

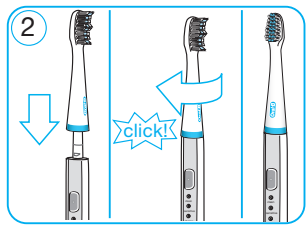
2
click!

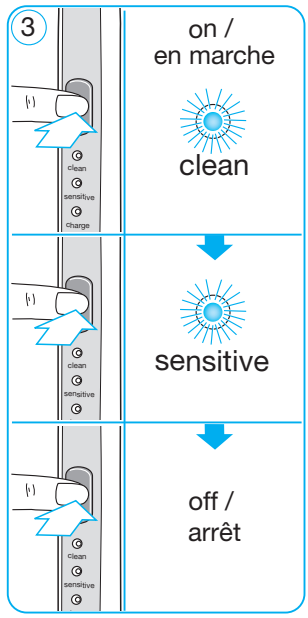
3
on /
en marche
clean
sensitive
off /
arrêt

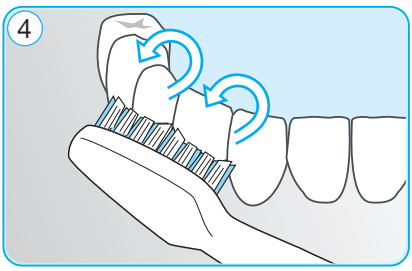
4

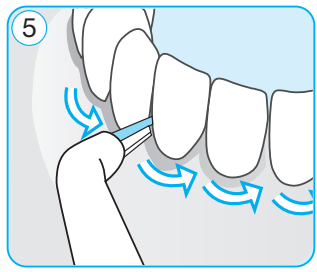
5

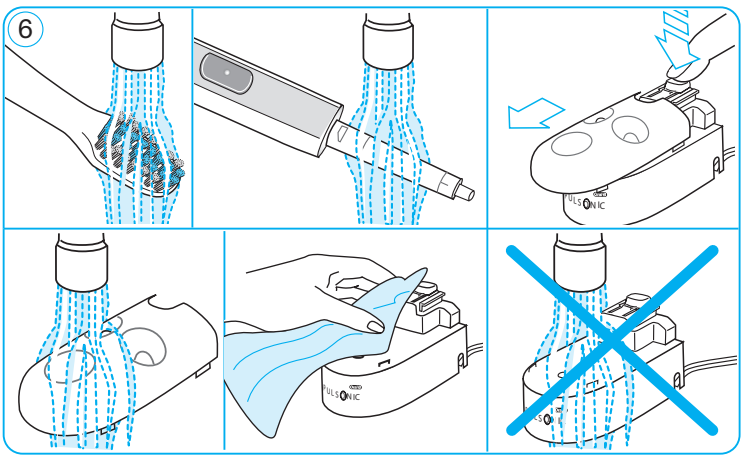
6

IMPORTANT SAFEGUARDS

Oral-B Pulsonic has been carefully designed to offer you and your family a unique brushing experience that is both safe and effective. However, when using electrical products, basic safety precautions should always be followed.

Read all instructions before using.

DANGER

In order to reduce the risk of electrocution:

1. Do not place or store the charger where it can fall or be pulled into a tub or sink.
2. Do not place the charger in water or other liquid.
3. Do not reach for a charger that has fallen into water. Unplug immediately.

WARNING

To reduce the risk of burns, electrocution, fire or injury:

1. Close supervision is necessary when this product is either used by or near children or invalids.
2. Use this product only for its intended use as described in this manual. Do not use attachments or chargers not recommended by the manufacturer.
3. Keep cord away from heated surfaces.
4. Never drop the appliance or insert any object into any opening of the appliance.
5. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or if it has been dropped into water. If any of these occur, please contact a service center and return the product for examination and repair.

IMPORTANT

1. Periodically check the cord for damage. If cord is damaged, take the charging unit to an Oral-B Braun Service Center. A damaged or non-functioning unit should no longer be used.
2. Do not touch the power plug with wet hands. This can cause electric shock.
3. When unplugging, always hold the power plug instead of the cord.
4. Do not put metal objects such as coins and clips on the charger. This may generate heat damaging the unit and heating the metal item presenting a potential burn hazard.
5. Do not modify the product. Do not disassemble or repair. This may cause fire, electric shock or injury. Consult your dealer for repairs or contact an Oral-B Braun Service center. Do not disassemble the product except when disposing of the battery.
6. When taking out the battery for disposal, use caution not to short the positive (+) and negative (-) terminals.
7. This product is not intended for use by children under age three.

CAUTION

If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.

SAVE THESE INSTRUCTIONS

Description

a Brush head
b Precision Tip
c On/off button
d Mode indicators
e Charge indicator
f Handle
g Charging unit with handle stand and release button

Connecting and charging

The toothbrush is electrically safe and can be used in the bathroom without hesitation.

- Plug the charging unit (g) into an electrical outlet and place the handle (f) on the charging unit ①.
- A full charge takes at least 12 hours and will provide an operation time of approximately 30 minutes.
- For everyday use, the handle can be stored on the plugged-in charging unit to maintain the toothbrush at full power. Overcharging is impossible.
- To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and fully discharge the handle by regular use at least every 6 months.

Using your toothbrush

Attaching the brush head
Slide the brush head (a) on the handle and turn until it clicks into place as shown in picture ②.

Brushing modes
Oral-B Pulsonic offers different brushing modes for varying oral care needs:

«Clean» – Gentle, effective mouth cleaning.

«Sensitive» – Gentle cleaning for sensitive areas.

Your toothbrush automatically starts in the «Clean» mode when pressing the on/off button (c) ③. To shift from the «Clean» to the «Sensitive» mode, press the on/off button once again. To turn your toothbrush off, press the on/off button.

Brushing technique
- Wet brush head and apply toothpaste. You can use it with any toothpaste.
- To avoid splashing place the brush head on your teeth, then switch on.
- Move the brush head in a slightly circular motion, similar to a manual toothbrush ④.
- After a few seconds, guide the bristles to the next section
- During the first few days of use, it is possible that your gums may bleed slightly. Should bleeding persist after 2 weeks, contact your dentist.
- Replace brush head every 3 months or when bristles are worn.

Timer
A short stuttering sound at 30-second intervals (one break), which you can hear and feel, reminds you to brush the four quadrants of your mouth equally for a better overall clean.

A long stuttering sound (two breaks) indicates when the professionally recommended 2-minute brushing time has been reached.

Precision Tip
The Precision Tip (b) is designed for cleaning between teeth as well as around bridges, crowns and implants. To use, position at a 45 degree angle to gumline and slowly guide it along the gumline from one interdental space to the next ⑤.

Cleaning

Switch off the handle and remove the brush head. Rinse both the brush head and handle under running water and wipe them dry ⑥.
From time to time also clean the charging unit with a damp cloth. For thorough cleaning you may remove the handle stand by pushing the release button on top of the charging unit.

Environmental notice

This product is provided with a nickel-metal hydride battery, which does not contain any harmful heavy metals. Nevertheless, in the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at an Oral-B Braun Service Center or at approved recycling or disposing locations in accordance with local regulations.

Battery removal at the end of the product's useful life
Open the handle as shown, remove the battery and dispose of it according to local environmental regulations.

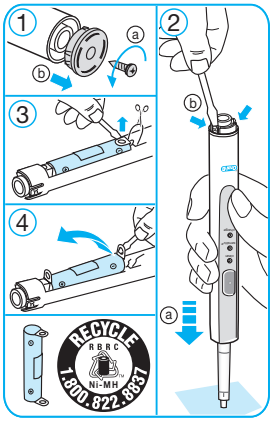

Caution! Opening the handle will destroy the appliance and invalidate the warranty.

Subject to change without notice.

FOR USA ONLY

Limited 2-Year Warranty

Oral-B Braun warrants this appliance to be free of defects in material and workmanship for a period of two years from the date of original purchase at retail.
If the appliance exhibits such a defect, Oral-B Braun will, at its option, repair or replace it without cost for parts and labor. The product must be carried in or shipped, prepaid and insured (recommended), to an authorized Oral-B Braun Service Center. Proof of date of original purchase is required.
The cost to ship the product to an authorized Service Center is the responsibility of the consumer, the cost to return the product to the consumer is the responsibility of Oral-B Braun.
This warranty does not cover finishes or normal wear, nor does it cover damage resulting from accident, misuse, dirt, water, tampering, unreasonable use, service performed or attempted by unauthorized service agencies, failure to provide reasonable and necessary maintenance, including recharging, or units that have been modified or used for commercial purposes.

ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE. IN NO EVENT WILL ORAL-B BRAUN BE RESPONSIBLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT.
Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state.

How to obtain service in the USA
Should this product require service, please call 1-800-566-7252 to be referred to the authorized Oral-B Braun Service Center closest to you.

To obtain service:
A. Carry the product in to the authorized Oral-B Braun Service Center of your choice or,
B. Ship the product to the authorized Oral-B Braun Service Center of your choice. Pack the product well. Ship the product prepaid and insured (recommended). Include a copy of your proof of purchase to verify warranty coverage, if applicable.

To obtain original Oral-B Braun replacement parts and accessories:
Contact an authorized Oral-B Braun Service Center. Please call 1-800-566-7252 to be referred to the authorized Oral-B Braun Service Center closest to you.
To order original Oral-B Braun replacement parts and accessories (including replacement brush heads) by phone: Please call 1-800-566-7252.
To speak to an Oral-B Braun Consumer Service Representative: Please call 1-800-566-7252.

FOR CANADA ONLY

Limited 2-Year Warranty

In the event this appliance fails to function within the specified warranty period because of defects in material or workmanship, and the consumer returns the unit to an authorized service center, Braun Canada will, at its option either repair or replace the unit without additional charge to the consumer. This warranty does not cover any product which has been damaged by dropping, tampering, servicing performed or attempted by unauthorized service agencies, misuse or abuse. This warranty excludes units which have been modified or used for commercial purposes.

To the extent allowed by law, Braun Canada shall not be responsible for loss of the product, loss of time, inconvenience, commercial loss, special or consequential damages.
The provisions of this warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in applicable provincial legislation.

How to obtain service in Canada
Should this product require service, please call 1-800-566-7252 to be referred to the authorized Oral-B Braun Service Center closest to you.

To obtain service:
A. Carry the product in to the authorized Oral-B Braun Service Center of your choice or,
B. Ship the product to the authorized Oral-B Braun Service Center of your choice. Pack the product well. Ship the product prepaid and insured (recommended). Include a copy of your proof of purchase to verify warranty coverage, if applicable.

To obtain original Oral-B Braun replacement parts & accessories:
Contact an authorized Oral-B Braun Service Center. Please call 1-800-566-7252 to be referred to the authorized Oral-B Braun Service Center closest to you.

To speak to an Oral-B Braun Service Representative:
Please call 1-800-566-7252.

CONSIGNES DE SÉCURITÉ IMPORTANTES

La brosse à dents **Oral-B Pulsonic** a été soigneusement conçue pour vous offrir, ainsi qu'à votre famille, une expérience de brossage unique qui est à la fois efficace et sécuritaire. Cependant, des mesures de sécurité de base devraient toujours être respectées lors de l'utilisation d'appareils électriques.

Veuillez lire les instructions au complet avant l'utilisation.

DANGER

Dans le but de réduire les risques d'électrocution :

1. Ne pas placer ou ranger le chargeur à un endroit où il risque de tomber ou d'être poussé dans le bain ou l'évier.
2. Ne pas immerger le chargeur dans l'eau ou dans un autre liquide.
3. Ne pas prendre un chargeur qui est tombé dans l'eau. Débrancher immédiatement.

AVERTISSEMENT

Afin de réduire les risques de brûlure, d'électrocution, de feu ou de blessure :

1. Une surveillance attentive est nécessaire lorsque ce produit est utilisé par un enfant ou une personne handicapée, ou près d'eux.
2. Utiliser ce produit conformément à l'utilisation prévue dans ce manuel. Ne pas utiliser d'accessoire ni de chargeur non recommandé par le fabricant.
3. Tenir le cordon loin des surfaces chauffées.
4. Ne jamais échapper l'appareil ni insérer d'objet dans les fentes de l'appareil.
5. Ne pas faire fonctionner ce produit si la fiche ou le cordon sont endommagés, si l'appareil ne fonctionne pas correctement, s'il a été échappé ou endommagé ou si le chargeur a été échappé dans l'eau. Dans chacun de ces cas, veuillez communiquer avec le centre de service et retourner le produit pour vérification et réparation.

IMPORTANT

1. Vérifier régulièrement l'état du cordon. Si le cordon est endommagé, apporter le dispositif de charge dans un centre de service Oral-B Braun. Un appareil endommagé ou qui ne fonctionne plus ne doit pas être utilisé.
2. Ne pas toucher le cordon les mains mouillées pour éviter un choc électrique.
3. Toujours tenir la fiche d'alimentation électrique et non le cordon au moment de débrancher l'appareil de la prise électrique.
4. Ne pas mettre d'objets de métal sur le chargeur, comme des pièces de monnaie ou des agrafes, puisque cela pourrait entraîner un réchauffement de l'unité causant des dommages ainsi qu'un risque de brûlure causé par le morceau de métal.
5. Ne pas modifier le produit. Ne pas le désassembler ni le réparer puisque cela pourrait causer un incendie, un choc électrique ou des blessures. Consulter votre détaillant pour les réparations ou communiquer avec un centre de réparation Oral-B Braun. Ne pas désassembler le produit, sauf pour jeter la pile.
6. Faire attention de ne pas court-circuiter les bornes positives (+) et négatives (–) au moment de retirer la pile pour la jeter.
7. L'utilisation de ce produit par les enfants de moins de trois ans est contre-indiquée.

AVERTISSEMENT

Si vous recevez des soins buccodentaires, consultez votre professionnel de soins dentaires avant l'utilisation.

CONSERVER CES INSTRUCTIONS

Description

a Brossette
b Precision Tip
c Bouton marche/arrêt
d Indicateurs d'état
e Indicateur de charge
f Manche
g Dispositif de chargement avec support pour manche et bouton de déclenchement

Branchement et chargement

La brosse à dents est un appareil électrique sécuritaire qui a été conçu spécialement pour être utilisé dans la salle de bain.

- Brancher le dispositif de charge (g) dans une prise de courant et placer le manche de la brosse à dents (f) sur le dispositif de charge ①.
- Le chargement complet nécessite au moins 12 heures et permettra l'utilisation de la brosse à dents pendant environ 30 minutes.
- Pour l'utilisation quotidienne, le manche de la brosse à dents peut être rangé sur le dispositif de charge afin d'être maintenu à puissance maximale. Il est impossible de surcharger la brosse à dents.
- Afin de maintenir la capacité maximale de la pile rechargeable, débrancher le dispositif de charge et décharger complètement le manche en utilisant la brosse à dents de façon régulière. Cela devrait effectué au minimum une fois tous les 6 mois.

Utilisation de votre brosse à dents

Fixation de la brossette
Fixer la brossette (a) au manche et la tourner jusqu'à ce que vous entendiez un déclic comme sur l'illustration ②.

Modes de brossage
La brosse à dents Oral-B Pulsonic offre différents modes de brossage afin de mieux répondre à vos besoins :

« Nettoyage » – Nettoyage doux et efficace de la bouche.

« Sensible » – Nettoyage doux des endroits sensibles.

Votre brosse à dents sera automatiquement en mode « Nettoyage » lorsque vous appuyez sur le bouton marche/arrêt (c) ③. Pour passer du mode « Nettoyage » au mode « Sensible », appuyer sur le bouton marche/arrêt une fois de plus. Pour arrêter la brosse à dents, appuyer sur le bouton marche/arrêt.

Techniques de brossage
- Mouiller la brossette sous l'eau et appliquer du dentifrice. Vous pouvez l'utiliser avec n'importe quel dentifrice.
- Pour éviter les éclaboussures, placer la brossette sur vos dents avant de mettre la brosse en marche.
- Déplacer la brossette en un mouvement circulaire, comme lorsque vous utilisez une brosse à dents manuelle ④.
- Après quelques secondes, guider les soies vers une autre section.
- Au cours des premiers jours d'utilisation, il se peut que vos gencives saignent légèrement. Si elles continuent de saigner après 2 semaines, communiquez avec votre dentiste.
- Remplacer la brossette tous les 3 mois ou lorsque les soies sont usées.

Minuterie
Un signal court et saccadé se fera entendre et sentir à des intervalles de 30 secondes (une pause) pour vous rappeler de brosser également les quatre quadrants de votre bouche afin d'en optimiser le nettoyage.

Un long signal saccadé (deux pauses) est émis lorsque les deux minutes de brossage recommandées par les professionnels des soins dentaires sont écoulées.

Precision Tip
La brossette Precision Tip (b) est conçue pour nettoyer entre les dents ainsi qu'autour des ponts, des couronnes et des implants. Pour l'utiliser, la mettre à un angle de 45 degrés de la limite gingivale et la guider lentement d'un espace interdentaire à l'autre ⑤.

Nettoyage

Mettre la brosse à dents en mode d'arrêt et retirer la brossette. Rincer la brossette et le manche sous l'eau et bien les essuyer ⑧. À l'occasion, nettoyer également le dispositif de chargement à l'aide d'un linge humide. Pour un nettoyage en profondeur, retirer le support pour manche en appuyant sur le bouton de déclenchement qui se trouve sur le dessus du dispositif de chargement.

Avis environnemental

Ce produit est offert avec une pile à hydrure métallique de nickel qui ne contient pas de métaux lourds nocifs. Néanmoins, dans le but de protéger l'environnement, ne pas jeter ce produit avec les ordures ménagères à la fin de sa vie utile. La destruction des piles peut se faire à un centre de service Oral-B Braun ou dans une installation de recyclage ou d'élimination approuvée conformément aux règlements locaux.

Retrait de la pile à la fin de la vie utile du produit
Ouvrir le manche tel qu'illustré, retirer et jeter la pile conformément aux règlements environnementaux locaux.

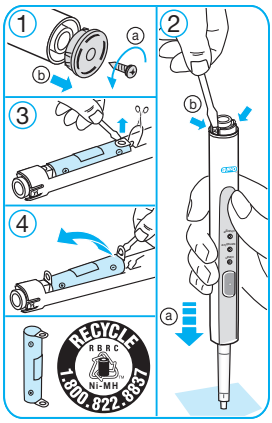

Mise en garde! L'ouverture du manche endommagera l'appareil et annulera la garantie.

Sujet à changement sans préavis.

POUR LE CANADA SEULEMENT

Garantie limitée de 2 ans

Si cet appareil ne fonctionne plus au cours de la période de garantie précisée en raison de défauts de fabrication ou de main d'œuvre, et que le consommateur retourne l'appareil à un centre de service autorisé, Braun Canada se réserve le droit de le réparer ou de le remplacer et ce, sans frais de pièce ni de main d'œuvre. Cette garantie ne couvre pas les produits qui ont été endommagés suite à une chute, une modification, un entretien ou des tentatives d'entretien effectués par des centres de service après-vente non agréés, à un mauvais usage ou à un usage excessif. Les pièces ayant été modifiées ou utilisées à des fins commerciales ne sont pas couvertes par cette garantie.

Dans la mesure permise par la loi, Braun Canada ne sera tenue responsable de la perte du produit, de pertes de temps, de dérangements, de pertes commerciales, ni de dommages indirects résultant de l'utilisation de ce produit. Les dispositions de cette garantie sont un ajout, et non une modification ou une soustraction des garanties réglementaires et d'autres droits et recours contenus dans les lois provinciales applicables.

Comment obtenir du service au Canada
Si ce produit nécessite nos services, veuillez appeler au 1-800-566-7252 afin d'être référé au centre de service Oral-B Braun autorisé le plus près de chez vous.

Pour obtenir nos services :
A. Apporter le produit au centre de service Oral-B Braun de votre choix ou,
B. Expédier le produit au centre de service Oral-B Braun de votre choix. Prière de bien emballer le produit. Expédier le produit, port payé, par courrier recommandé. Joindre une copie de votre preuve d'achat pour vérifier la couverture de la garantie, si cela s'applique.

Pour obtenir des accessoires et des pièces de remplacement originales Oral-B Braun :
Communiquer avec un centre de service Oral-B Braun autorisé. Appeler au 1-800-566-7252 afin d'être référé au centre de service Oral-B Braun autorisé le plus près de chez vous.

Pour parler à un représentant du service à la clientèle de Oral-B Braun :
Appeler au 1-800-566-7252.